Installation

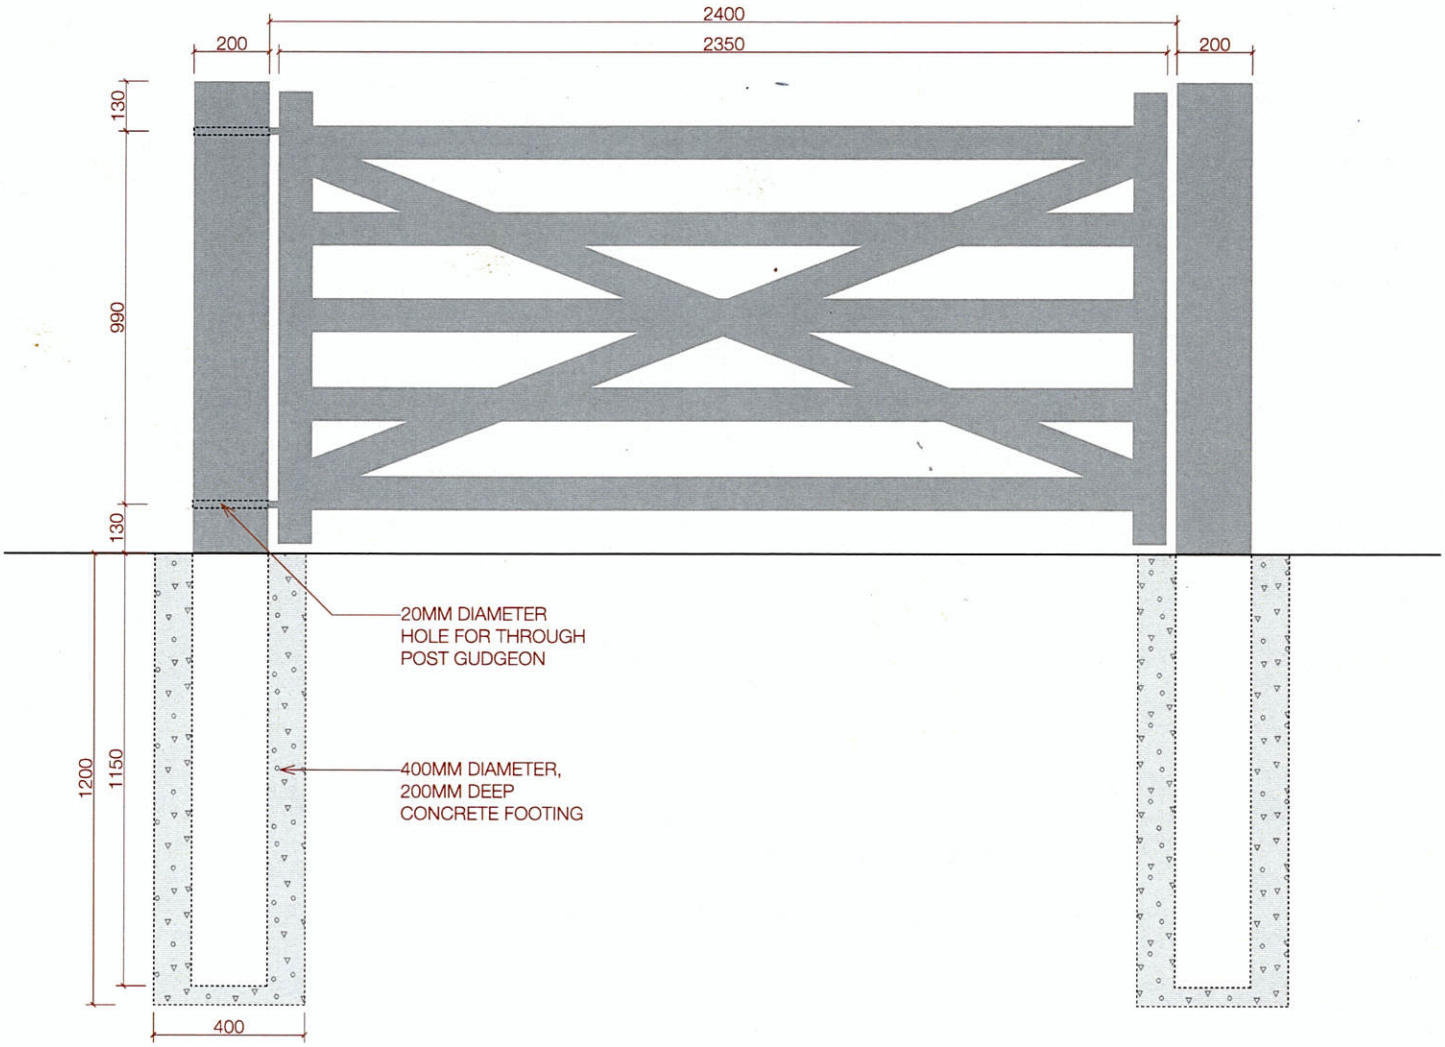

1 Footings. Post holes should be a minimum of 400mm diameter by 1200mm deep. Concrete is recommended.

2 Install posts using a level to ensure they are the same height and stand true vertically.

3 Drill two x 20mm diameter holes at 990mm centres to house the through post gudgeons. The bottom hole should be a minimum of 130mm above driveway level.

4 Place the lower gudgeon in the hole and upper gudgeon (pin facing down) into the top hinge and holding the gate guide the gudgeon through the post and fix in position with the nuts and washers provided.

Available in standard sizes from 1.2 to 3.6m (gate opening).

Gate length is 50mm shorter than the listed size. This means that the gate fits an opening of the size mentioned on the list. For example a 2.4m gate is 2350mm long and gate posts need to be set 2.4m apart.

All gates 1.2m high.

Traditional Farm Gates can span up to 7.2m, which allows for large vehicle access.

Manufactured from Class 1 Durability ACQ treated Spotted Gum.

Quality galvanised hinges and fasteners included

Supplied pre-assembled.